



SINGLE HANDLE PLP PULLDOWN FAUCET INSTALLATION INSTRUCTIONS

All Traditional, Modern, Contemporary, and Industrial Single Handle PLP Pulldown Faucets









Model #s:

5200, 5210, 5300, 5400, 5410, 5500, 5600, 5610, 5700, 5800, 5810, 5900, 5910, 5930, 5940, 9300, 9350, 9400, 9410, 9450, 9460, 9700, 9750, 9800, 9810, 9850, 9860, 9900, 9910, 9930, 9940, 9950, 9960, 9980, 9990, 10200, 10210, 10220, 10230, 10240, 10250, 10260, 10270, 10280, 10290, 10300, 10310, 10320, 10330, 10340, 10350, 10360, 10370, 10380, 10390

BEFORE YOU BEGIN YOUR INSTALLATION:



Turn off water supply.



Observe all local plumbing codes.



Inspect waste and water supplies for signs of damage.
Replace as necessary.



DO NOT use petroleum based products on this faucet.

REQUIRED TOOLS:



1. Adjustable Wrench



2. Phillips Screwdriver

PARTS INCLUDED:

*XX represents finish

HK-THC-XX*

 
HANDLE BUTTON KIT (TRADITIONAL ONLY)

HK-USMI375


UNDER SINK MOUNTING HARDWARE KIT (1-3/8")

HANDLE POSITION


Waterstone faucets are designed for 3 different faucet positions. Handle on left, front and right. Your faucet is configured for the most common installation (see below). To reverse this and have the handle positioned on the left, connect the hose for cold water to the hot supply and the hose for hot water to the cold supply. This will maintain the relationship of pulling the handle for hot water or pushing for cold water.



HANDLE ON LEFT

 


HANDLE IN FRONT

 


HANDLE ON RIGHT


PULLDOWN FAUCET INSTALLATION

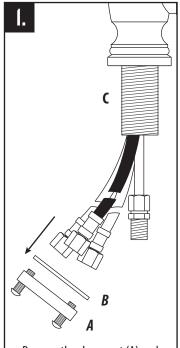


Remove the clamp nut (A) and washer (B) from the threaded shroud (C).

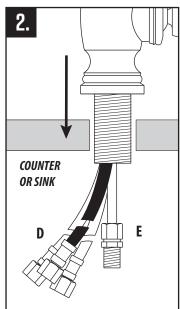

Fit flexible hoses (D) and spray connection tube (E) through hole on counter or sink. (No plumbers putty is required. O-ring seals base).

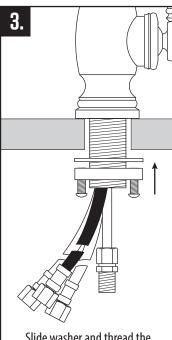


Slide washer and thread the clamp nut onto threaded shroud. Tighten nut snug to underside of sink or counter.

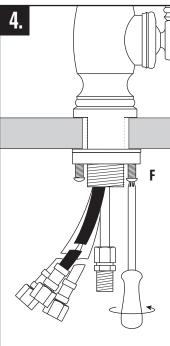

Turn faucet to the desired handle position. Securely tighten clamp screws (F).

CONNECT THE PULLDOWN SPRAY HOSE

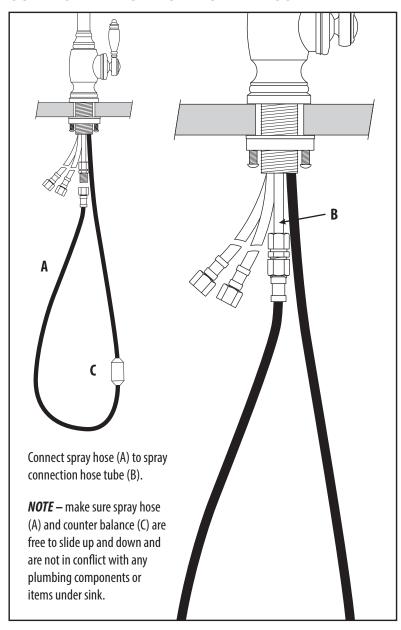

HOW TO ADJUST HANDLE POSITION

faucet handle is positioned to the left or right (Fig. 1). Waterstone gives you the option of adjusting the handle 45 degrees to avoid hitting backsplash.


On some kitchen countertops, the handle may hit the backsplash when the

ORIGINAL FACTORY POSITION
MAY HIT BACKSPLASH


NEW ADJUSTED POSITION
CLEARS BACKSPLASH

CONNECTING SUPPLY HOSES


Before connecting supply hoses, flush supply stops to clear any debris. Place a bucket underneath stops and run water for 5 to 10 seconds. Turn water off. Carefully position hot and cold supplies so they will not interfere with other hoses. Connect supply hoses (A) to supply stops (B). **DO NOT** use teflon tape or plumbers putty. Turn water back on and check for leaks.

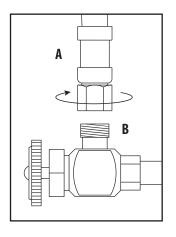

OPTIONAL DECORATIVE BUTTONS - TRADITIONAL

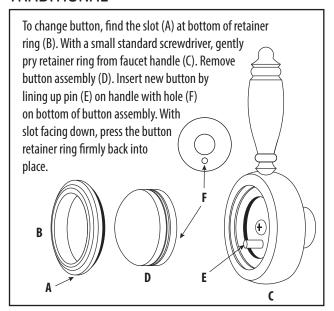


OPTIONAL HOT COLD INDICATOR RING - MODERN, CONTEMPORARY, INDUSTRAIL

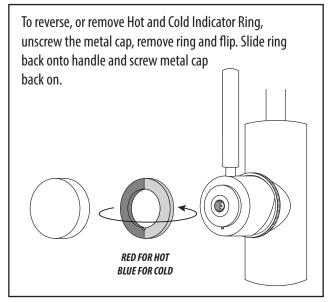

HOW TO ADJUST HANDLE TENSION


CONTEMPORARY

- 1. Unscrew and remove the metal cap (A). Remove Hot and Cold Indicator Ring (B).
- 2. Unscrew and remove holding screw (C) and washer (D).
- 3. Hold handle (E) in a vertical position. Pull straight off faucet. Rotate handle away from backsplash then slide handle back onto valve stem (F).
- 4. Insert holding screw with washer and tighten. Slide Hot and Cold Indicator Ring onto handle and thread metal cap back into place.
- 5. To adjust handle tension, turn ring (G) clockwise to increase or counterclockwise to decrease handle tension.

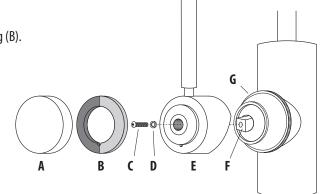


TRADITIONAL

- 1. Place a small standard screwdriver in the slot at the bottom of metal ring that surrounds the handle caps (A). Gently pry the cap from faucet handle (B).
- 2. Unscrew and remove holding screw (C) and washer (D).
- 3. Hold the handle (B) in a vertical position. Pull straight off faucet. Rotate handle away from backsplash then slide handle back onto valve stem (E).
- 4. Insert holding screw with washer and tighten. Snap handle cap back into place.
- 5. To adjust handle tension, turn ring (F) clockwise to increase or counterclockwise to decrease handle tension.

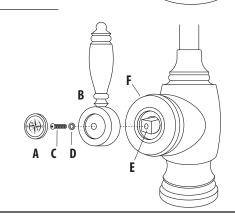


DEBRIS SCREEN FEATURE

- 1. Turn off water supplies underneath sink and remove any water pressure by opening the faucet handle.
- 2. Unscrew sprayer (A) from spray hose by holding knurled swivel (B).
- 3. Inspect, remove and clean debris screen (C) in sprayer. Once cleaned, replace debris screen and reattach to swivel.
- ${\bf 4. \ Close \ faucet \ handle \ and \ turn \ on \ water \ supplies. \ Make \ sure}$

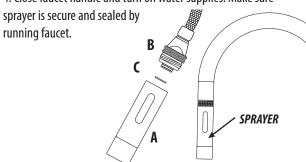

CLEANING AERATOR

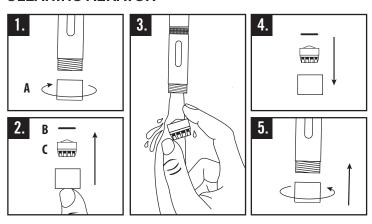

- 1. Gently unscrew and remove spout tip (A) by hand.
- 2. Remove O-ring (B). To remove aerator (C), push with finger from bottom.
- 3. Thoroughly rinse aerator with water until all debris is removed.
- 4. Place aerator, then 0-ring back into spout tip.
- 5. Gently screw spout tip, by hand, snuggly back onto spout.

