

## **SIDE SPRAY INSTALLATION**

CONTEMPORARY MODEL # 3025 TRADITIONAL MODEL # 4025


## **BEFORE YOU BEGIN YOUR INSTALLATION:**




Turn off water supply.






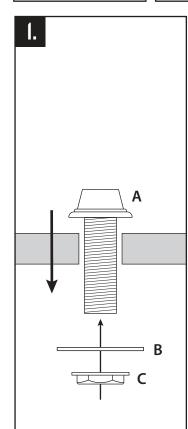


Insert side spray base (A) into side spray hole on your sink or counter. No plumbers putty is required. O-ring seals base. Slide washer (B), thread attaching nut (C) and securely tighten with channel locks.

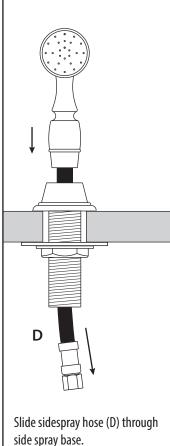



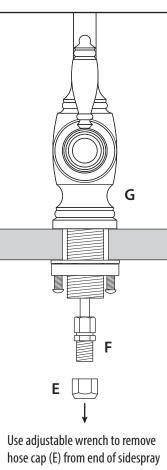

hose tube (F) on faucet (G).

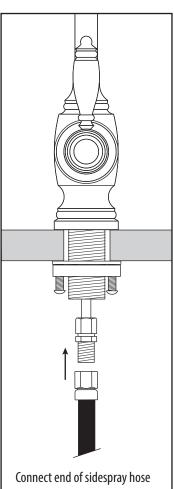

to sidespray hose tube. Use adjustable wrench to tighten. Turn water back on and check for leaks.